



## FB Plasmid Miniprep Kit

For research use only

Sample: up to 4 ml bacterial cells

Yield: up to 30µg of plasmid

### Introduction

The FB Plasmid Miniprep Kit provides a fast, simple, and cost-effective spin-column method for isolation of plasmid DNA from cultured bacterial cells. The FB Plasmid Miniprep Kit is based on alkaline lysis of bacterial cells followed by binding of DNA onto the glass fiber matrix of the spin column in the presence of a high amount of salt. Phenol extraction and ethanol precipitation are not required, and high-quality plasmid DNA is eluted with a small volume of Tris buffer (included in each kit) or water (pH is between 7.0 and 8.5). Plasmid DNA purified with the FB Plasmid Miniprep Kit is suitable for a variety of routine applications including restriction enzyme digestion, sequencing, library screening, in vitro translation, transfection of robust cells, ligation and transformation. The entire procedure can be completed within 15-20 minutes.

### Kit Contents

Catalog No.	SP0004	SP0100	SP0200	SP0300
S1 Buffer	1 ml	25 ml	45 ml	65 ml
S2 Buffer	1 ml	25 ml	45 ml	65 ml
S3 Buffer	1.5 ml	35 ml	65 ml	95 ml
W1 Buffer	2 ml	45 ml	85 ml	125 ml
W2 Buffer	300µl×2	15 ml	25 ml	25 ml×2
(Add Ethanol)	(1.2 ml)×2	(60 ml)	(100 ml)	(100 ml)×2
EL Buffer	1 ml	10 ml	20 ml	30 ml
RNase A (50mg/ml)	Added	50 µl	100 µl	150 µl
SP Columns	4 pcs	100 pcs	200 pcs	300 pcs
Collection Tubes	4 pcs	100 pcs	200 pcs	300 pcs

### NOTE

- ★ Add the provided RNase A solution to Buffer S1, mix, and store at 2-8°C.
- ★ Add ethanol (96-100%) to Buffer W2, **shaking before use** (see bottle label for volume).
- ★ Check Buffers before use for salt precipitation. Redissolve any precipitate by warming to 37°C.
- ★ Buffers S2, S3, and W1 contain irritants. Wear gloves when handling these buffers.

### FB Plasmid Miniprep Kit Protocol

#### Step 1 Bacterial Cells Harvesting

- ◆ Transfer 1.5 ml bacterial culture to a microcentrifuge tube
- ◆ Centrifuge at 14,000 x g for 1 minute and discard the supernatant.

#### Step 2 Resuspend

- ◆ Resuspend pelleted bacterial cells in 200 µl **Buffer S1 (RNase A added)** *Don't exceed 5 minutes!*

#### Step 3 Lysis

- ◆ Add 200 µl **Buffer S2** and mix thoroughly by inverting the tube 10 times (**Do not vortex**) and then stand at room temperature for 2 minutes or until the lysate is homogeneous.

#### Step 4 Neutralization

- ◆ Add 300 µl **Buffer S3** and mix immediately and thoroughly by inverting the tube 10 times (**Do not vortex**). Centrifuge at 14,000 x g for 3 minutes.

#### Step 5 Binding

### Quality Control

In accordance with FairBiotech's ISO-certified Total Quality Management System, the quality of the FB Plasmid Miniprep Kit is tested on a lot-to-lot basis to ensure consistent product quality.

### Additional requirements

- \* Ethanol (96-100%)
- \* 1.5 ml microcentrifuge tubes


- ◆ Place a **SP Column** in a **Collection Tube**. Apply the supernatant (from step 4) to the **SP column** by decanting or pipetting.
- ◆ Centrifuge at 14,000 x g for 30 seconds. Discard the flow-through and place the **SP column** back into the same **Collection Tube**.

### Step 6 Wash

- ◆ Add 400 µl of **Buffer W1** into the **SP Column**. Centrifuge at 14,000 x g for 30 seconds. Discard the flow-through and place the **SP column** back into the same **Collection tube**.
- ◆ Add 600 µl of **Buffer W2 (Ethanol added)** into the **SP Column**. Centrifuge at 14,000 x g for 30 seconds. Discard the flow-through and place the **SP column** back into the same **Collection tube**.
- ◆ Centrifuge at 14,000 x g again for 2 minutes to remove residual **Buffer W2**.

### Step 7 Elution

- ◆ To elute DNA, place the **SP column** in a clean 1.5 ml microcentrifuge tube.
- ◆ Add 50-200 µl **Buffer EL** or **water (pH is between 7.0 and 8.5)** to the center of each **SP column**, let stand for 2 minutes, and centrifuge at 14,000 x g for 2 minutes.

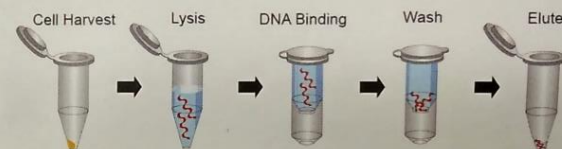

### Troubleshooting

Problem	Cause	Solution
Presence of RNA	RNA contamination	Prior to using Buffer S1, ensure RNase A is added.
Plasmid bands was smeared on agarose gel	Plasmid DNA degradation	Keep plasmid preparations on ice or frozen in order to avoid the plasmid DNA degradation
Presence of genomic DNA	Genomic DNA contamination	Do not overgrow bacterial cultures. Do not incubate more than 5 min after adding the Buffer S1.
Low yields of DNA	Low plasmid copy number	Increase the culture volume. Change the culture medium.
	96-100% ethanol not used	Add ethanol (96-100%) to the Buffer W2 before use.
	Nuclease contamination	Check buffers for nuclease contamination and replace if necessary. Use the new glass- and plastic-ware, and wear the gloves.
	Column overloaded	Decrease the loading volume or lower the culture density.
	SDS in the Buffer S2 precipitated	The SDS in the Buffer S2 may precipitate with time. If this happens, incubate the Buffer S2 at 30-40°C for 5 min and mix well.
	Incorrect elution conditions	Ensure that the Buffer E is added into the center of the SP Column.
	Plasmid lost in the host <i>E. coli</i>	Prepare and use a fresh culture.